

INSTRUCTION

06-2019

RZB
LIGHTING


Less is more 50

312317.002

IP 20 IK02

 ~ 220 - 240 V 50/60 Hz

 3 x 1,5 mm²
 1,50

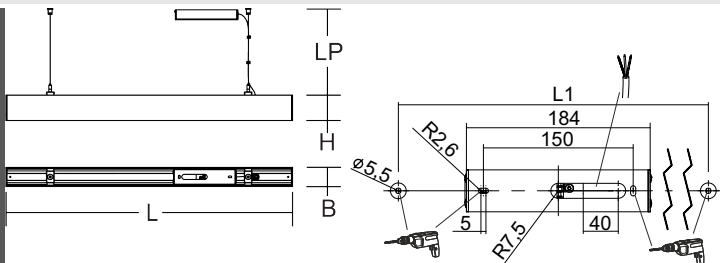


								T _a min	
312317.002		L 842, B 57, H 75		LP 2000		2,55 kg		-20 °C	
	P	P	Φ	CCT	CRI	T _a max			
LED	3 x 5,8 W	34 W	3850 lm	3000 K	80	30 °C			
EEK		EEK							
A++	A++	20 A	15	25					



Die Leuchte darf nur mit ihren vollständigen Schutzabdeckungen betrieben werden.
The luminaire must be used with its complete protective covers only.

 EN 12464



EN 12464
EN 13201



EN 12464 / EN 13201

Wartungsplan/
Maintenance
schedule




RZB
 Rudolf Zimmermann,
 Bamberg GmbH
 Rheinstraße 16
 D-96052 Bamberg
 Deutschland
 Telefon +49 951/79 09-0
 Telefax +49 951/79 09-198
 www.rzb.de
 info@rzb-leuchten.de

www.rzb.de


1 / 4




1

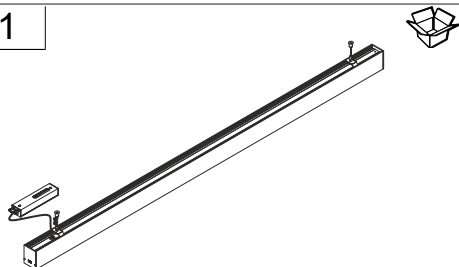


2

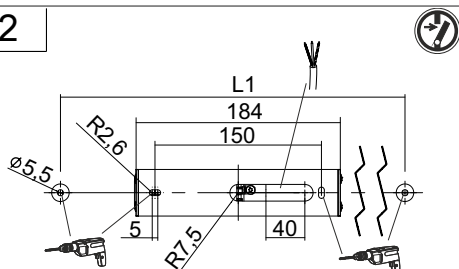


3

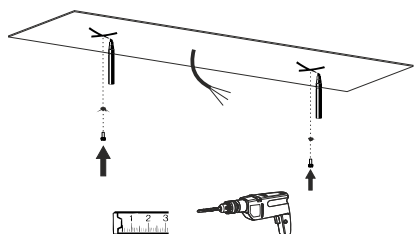


4

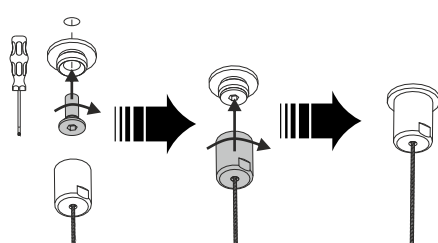


5

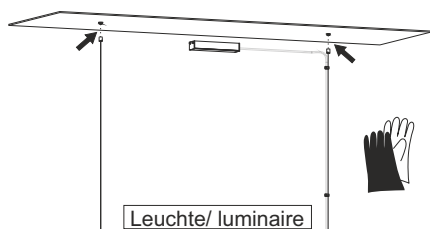


6

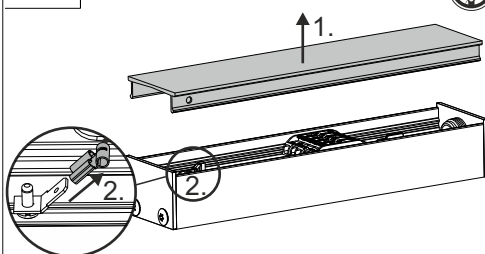

7

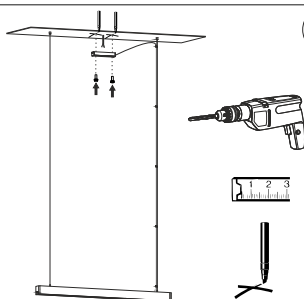

8

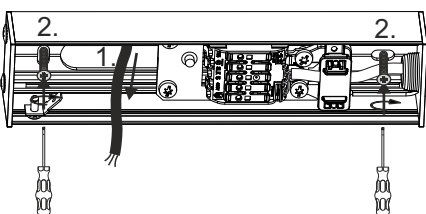





+




9

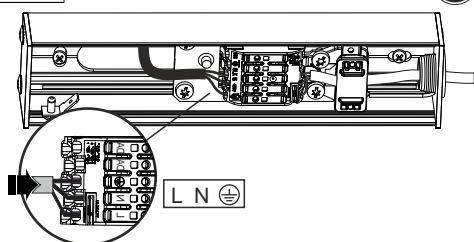


10

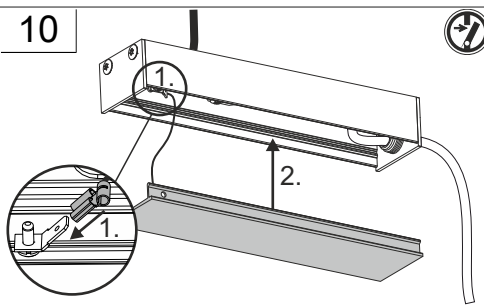


11

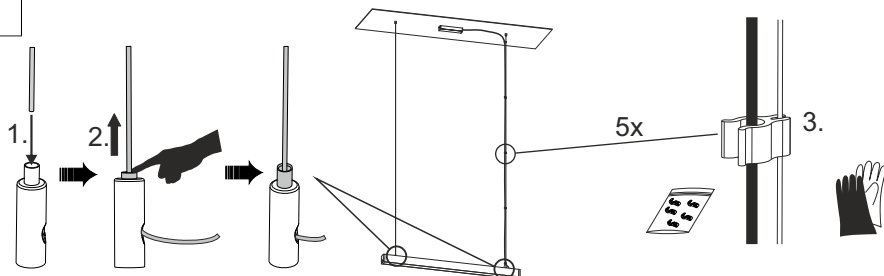

12

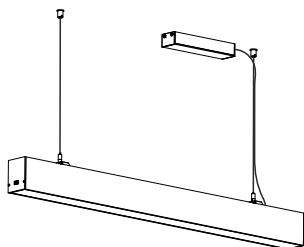

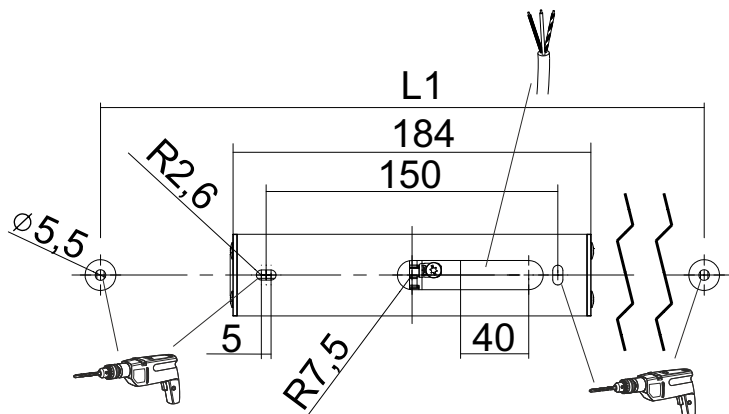

Less is more 50 Pendel

L	B	H	L1
848	57	75	580
1128	57	75	870
1408	57	75	1150
1689	57	75	1430
1969	57	75	1710

DIN 4844



Vor Installation, Wartung oder Reparatur freischalten/
power off before installation, maintenance or repair