


 

 
INSTRUCTION

06-2019


RZB
LIGHTING

Less is more 50

312308.002

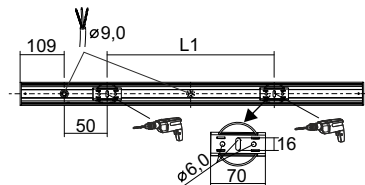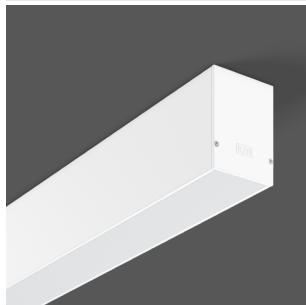


	 [mm]		T _a min			
312308.002	L 1682, B 57, H 75	3,7 kg	-20 °C			
	P 	P 	Φ 	CCT	CRI	T _a max
LED	6 x 5,8 W	40 W	4650 lm	3000 K	80	30 °C
EEK 	EEK 	 I max I max/2 T50	 B10	 B16		
A++	A++	20 A	15	25		

 

Die Leuchte darf nur mit ihren vollständigen Schutzabdeckungen betrieben werden.
The luminaire must be used with its complete protective covers only.

 EN 12464



EN 12464
EN 13201



EN 12464 / EN 13201


Wartungsplan/
Maintenance
schedule




RZB
Rudolf Zimmermann,
Bamberg GmbH
Rheinstraße 16
D-96052 Bamberg
Deutschland
Telefon +49 951/79 09-0
Telefax +49 951/79 09-198
www.rzb.de
info@rzb-leuchten.de




1

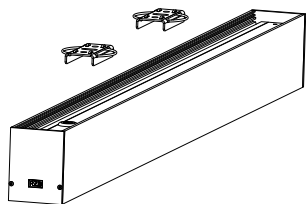


2

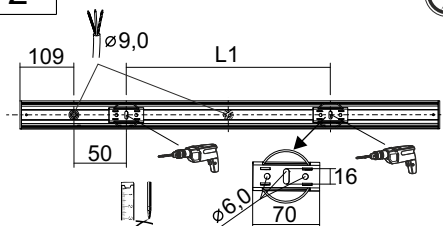

3

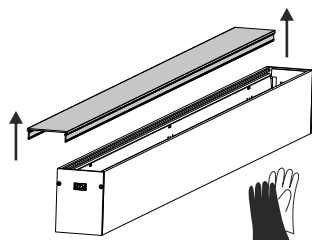


4

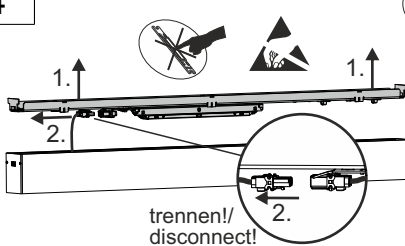


5









6a

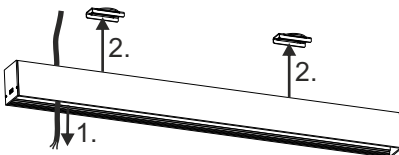

6b

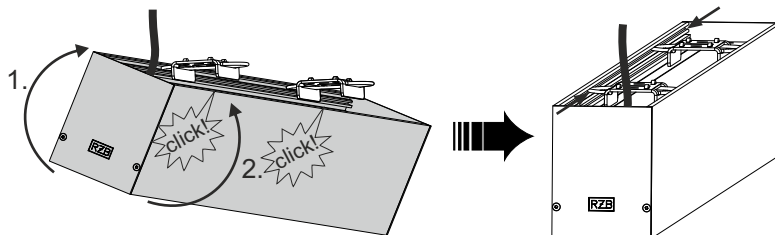

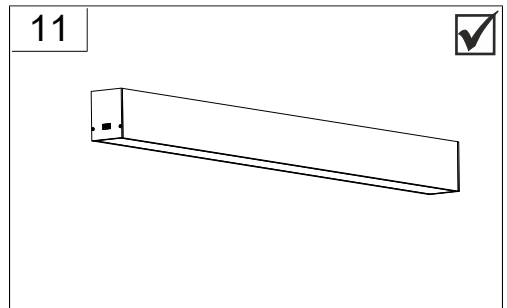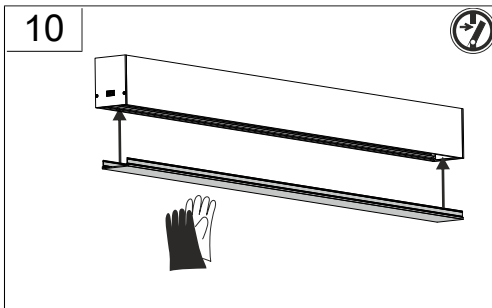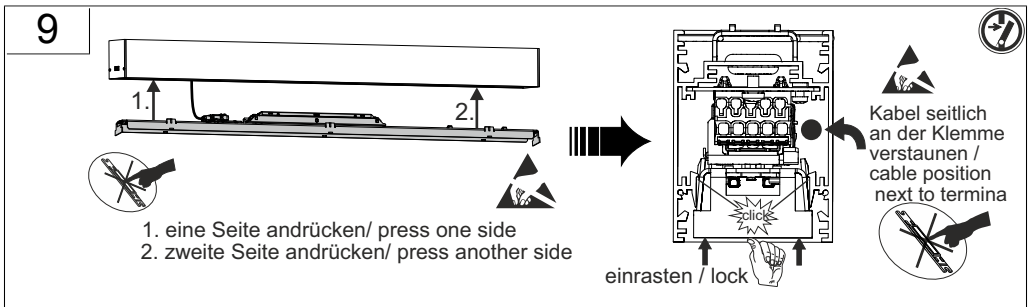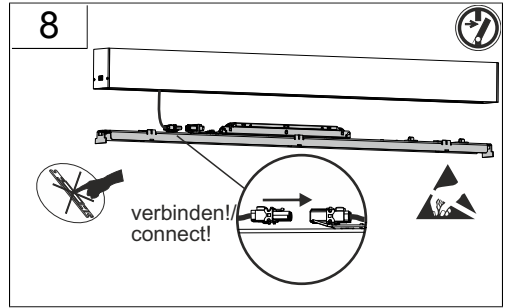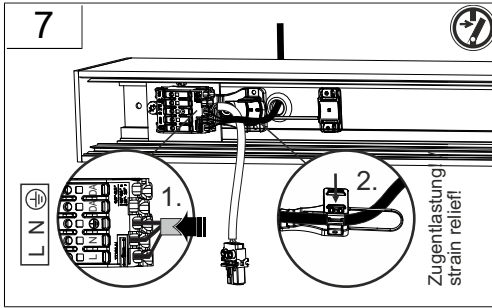

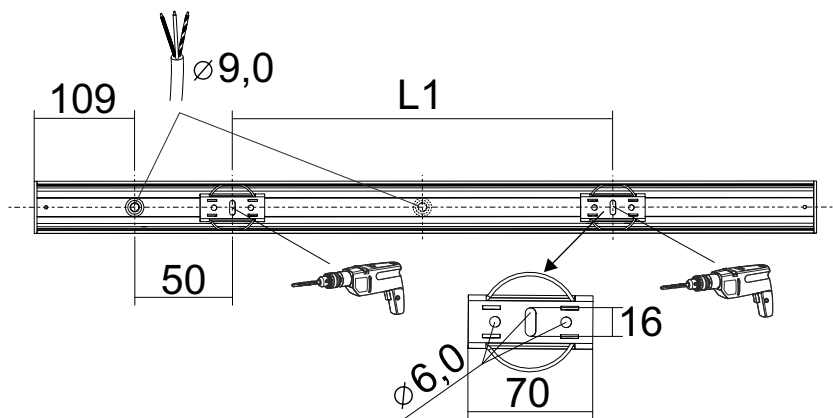

Less is more 50 Anbau

L	B	H	L1
848	57	75	580
1128	57	75	870
1408	57	75	1150
1689	57	75	1430
1969	57	75	1710

DIN 4844



Vor Installation, Wartung oder Reparatur freischalten/
power off before installation, maintenance or repair