

INSTRUCTION

06-2019

RZB
LIGHTING



Less is more 50

312336.002

IP 20 IK02

 ~ 220 - 240 V 50/60 Hz

 3 x 1,5 mm²
 1,50

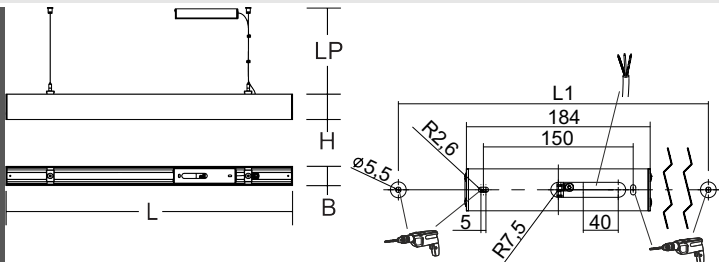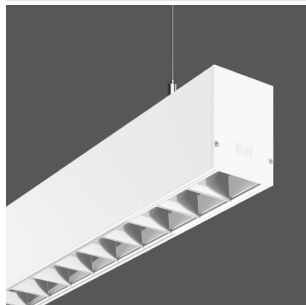

1 2 3 [mm]

1 2 3 [mm]



T_a min

312336.002

L 1122, B 57, H 75

LP 2000

3,1 kg

-20 °C



P

P

Φ

CCT

CRI

T_a max

LED

4 x 7,5 W

28 W

3350 lm

3000 K

80

30 °C

EEK

EEK

I max I max/2
T50

B10

B16

A+

A+

36 A / 100 µs

8

14



Die Leuchte darf nur mit ihren vollständigen Schutzabdeckungen betrieben werden.
The luminaire must be used with its complete protective covers only.

EN 12464



EN 12464

EN 13201



EN 12464 / EN 13201

Wartungsplan/
Maintenance
schedule




RZB
 Rudolf Zimmermann,
 Bamberg GmbH
 Rheinstraße 16
 D-96052 Bamberg
 Deutschland
 Telefon +49 951/79 09-0
 Telefax +49 951/79 09-198
 www.rzb.de
 info@rzb-leuchten.de

www.rzb.de


1 / 4




1

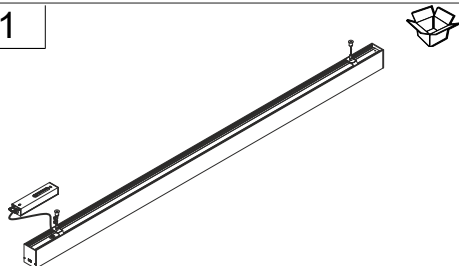


2

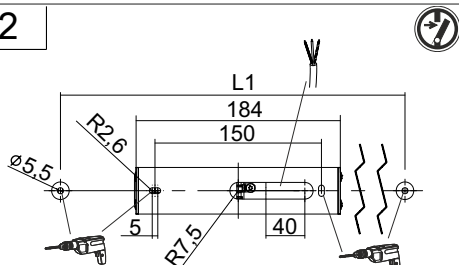


3

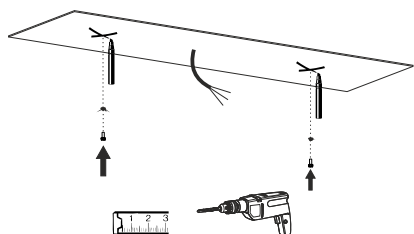


4

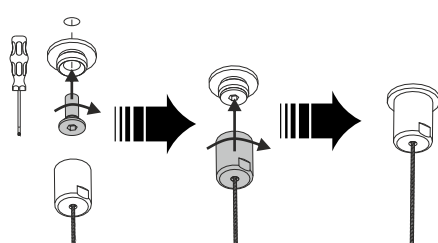


5

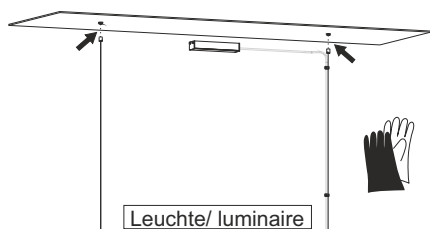


6

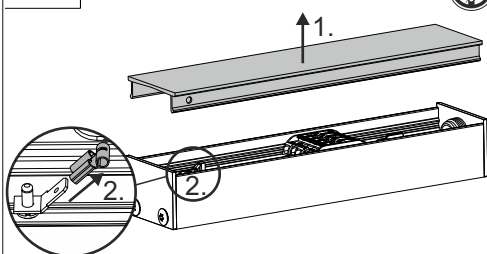

7

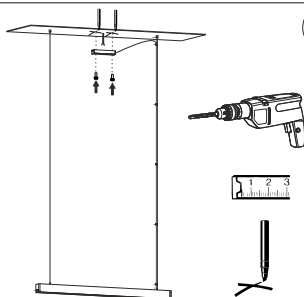

8

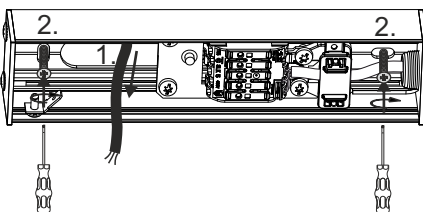





+




9

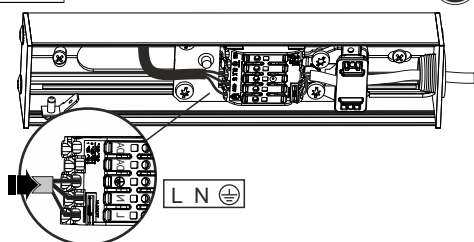


10

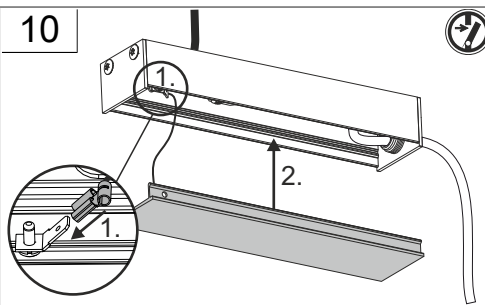


11

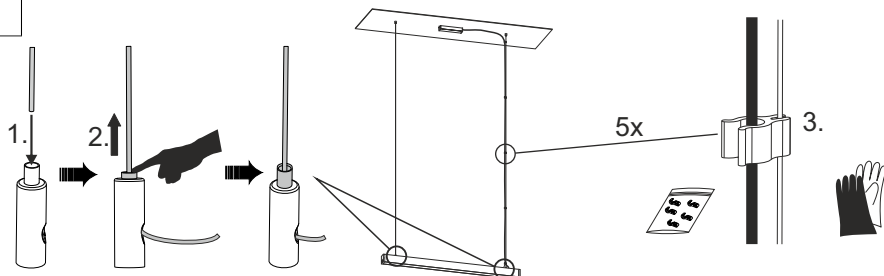

12

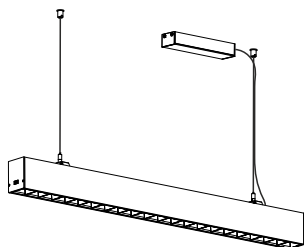

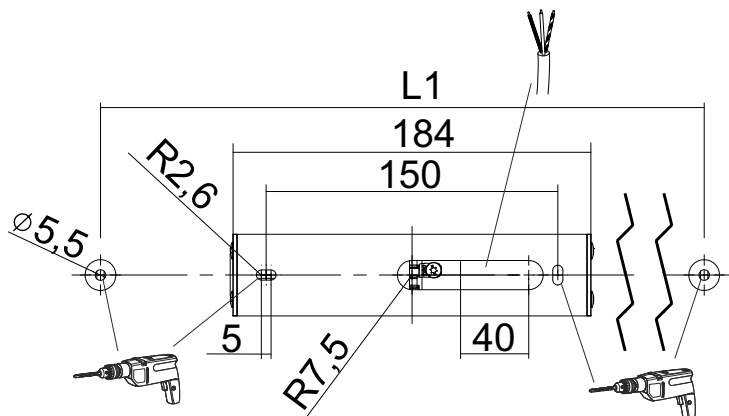

Less is more 50 Pendel

L	B	H	L1
848	57	75	580
1128	57	75	870
1408	57	75	1150
1689	57	75	1430
1969	57	75	1710

DIN 4844



Vor Installation, Wartung oder Reparatur freischalten/
power off before installation, maintenance or repair