


 
INSTRUCTION

06-2019

RZB
LIGHTING

Less is more 50

312315.003

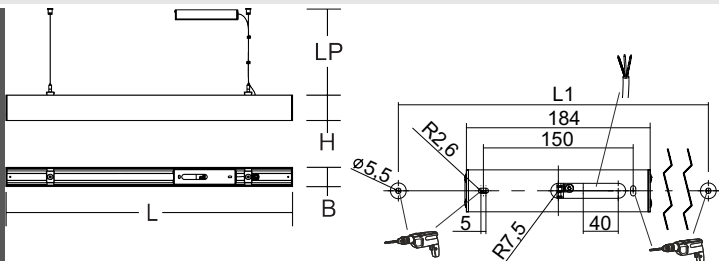

	 [mm]	 [mm]		T _a min		
312315.003	L 1962, B 57, H 75	LP 2000	4,8 kg	-20 °C		
	P 	P 	Φ 	CCT	CRI	T _a max
LED	7 x 5,8 W	47 W	5400 lm	3000 K	80	30 °C
EEK 	EEK 		 B10	 B16		
A++	A++	40 A	8	13		



Die Leuchte darf nur mit ihren vollständigen Schutzabdeckungen betrieben werden.
The luminaire must be used with its complete protective covers only.


EN 12464



EN 12464
EN 13201



 
EN 12464 / EN 13201
Wartungsplan/
Maintenance
schedule




RZB
Rudolf Zimmermann,
Bamberg GmbH
Rheinstraße 16
D-96052 Bamberg
Deutschland
Telefon +49 951/79 09-0
Telefax +49 951/79 09-198
www.rzb.de
info@rzb-leuchten.de




1

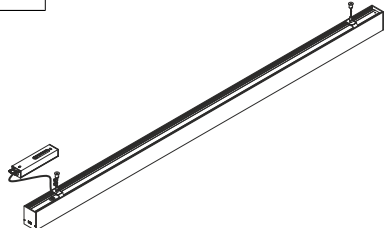


2

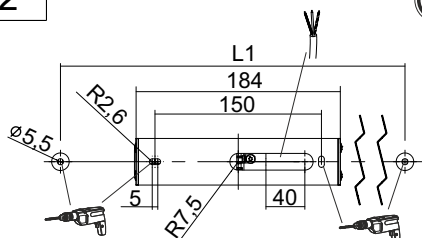


3

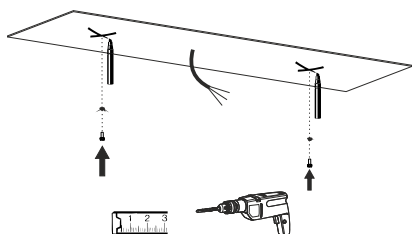


4

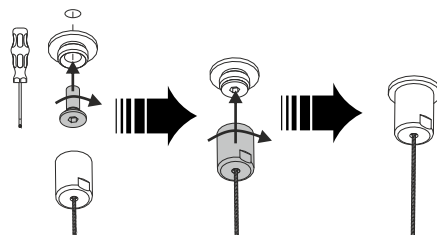


5

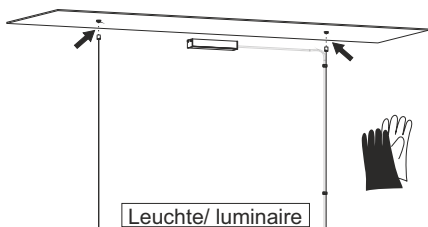


6

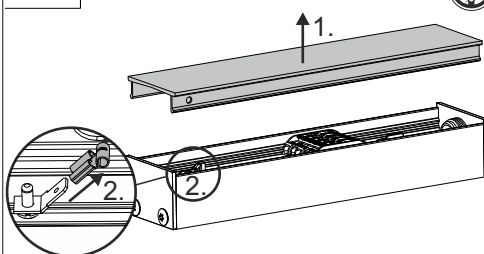

7

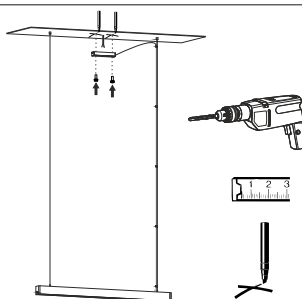

8

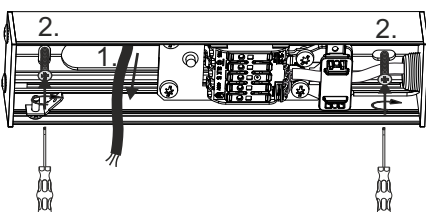





+




9

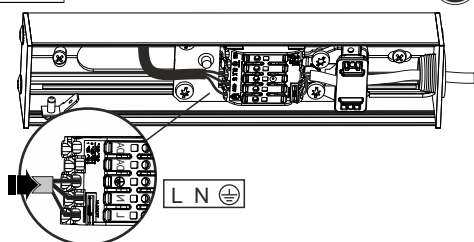


10

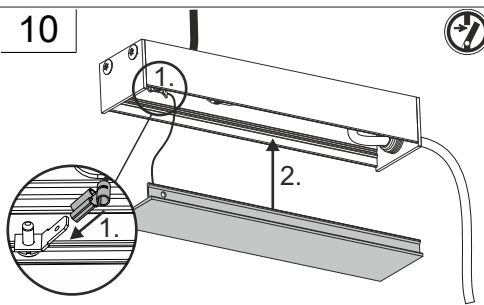


11

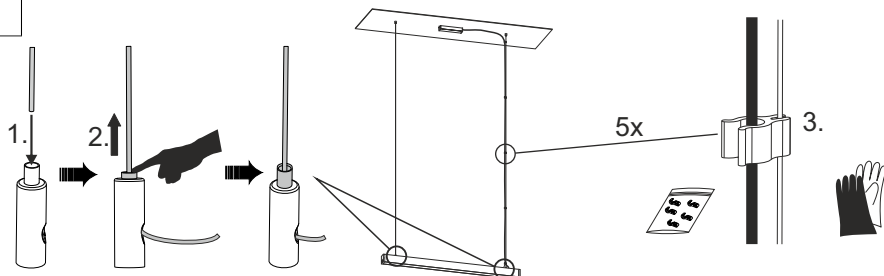

12

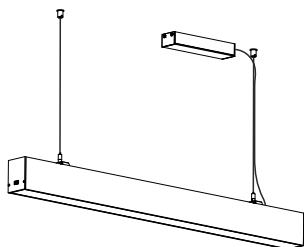

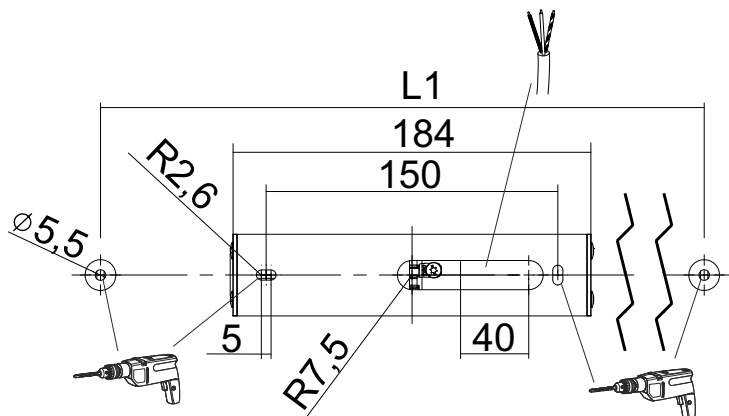

Less is more 50 Pendel

L	B	H	L1
848	57	75	580
1128	57	75	870
1408	57	75	1150
1689	57	75	1430
1969	57	75	1710

DIN 4844



Vor Installation, Wartung oder Reparatur freischalten/
power off before installation, maintenance or repair