

INSTRUCTION

26-2017

RZB
LIGHTING

Toledo Flat

901495.002.1





IP 40 IK06



200 - 240 V / 50/60 Hz



2 x 1,5 mm²

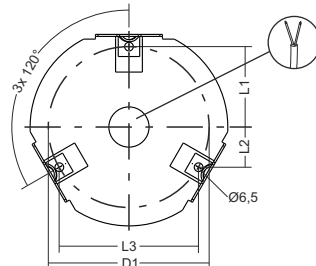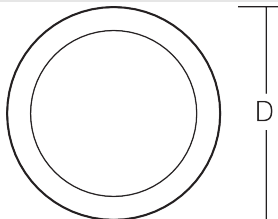

	L1	L2	L3	D1
901495.002.X	60	30	103,9	Ø120
901496.002.X.X	81	40,5	140,3	Ø162
901497.002.X.X	113,5	56,8	196,6	Ø227
901498.002.X.X	137,5	68,8	238,2	Ø275



901495.002.1

D 150, H 57

LED

5 W

732 g



EEK_{LED}

EEK

CRI

CCT

410 lm

A+

A+

80

4000K



36

57

36

 
57



instruction
Wartungsplan/
maintenance
schedule



DIN EN 61340-5-1



Die Leuchte darf nur mit ihren vollständigen Schutzabdeckungen betrieben werden.
The luminaire must be used with its complete protective covers only.

EN 12464




EN 12464




RZB
Rudolf Zimmermann,
Bamberg GmbH
Rheinstraße 16
D-96052 Bamberg
Deutschland
Telefon +49 951/79 09-0
Telefax +49 951/79 09-198
www.rzb.de
info@rzb-leuchten.de




1

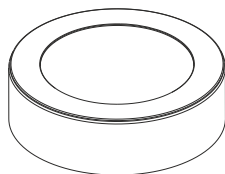


2

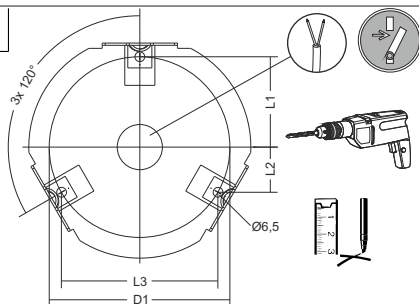


3

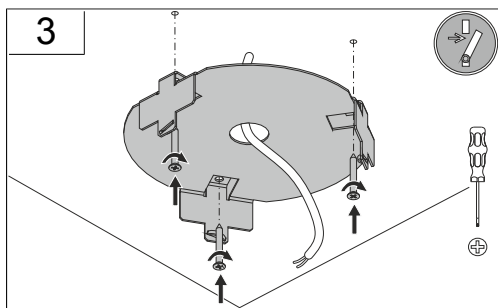


4

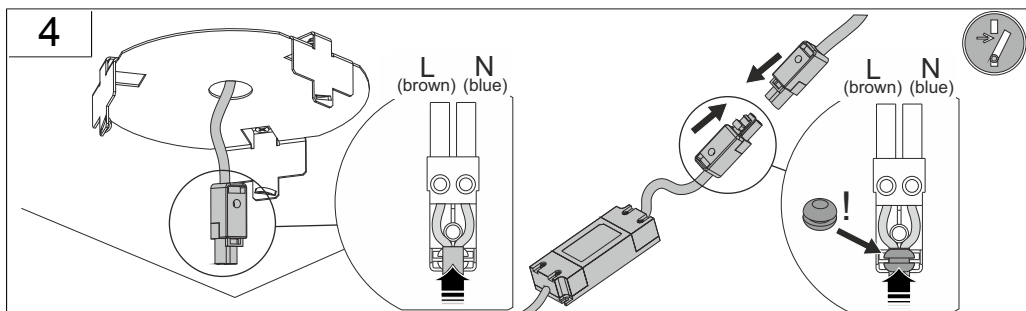



5

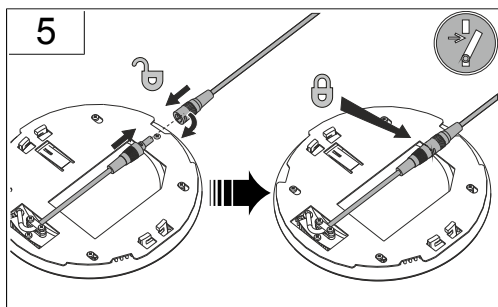

6

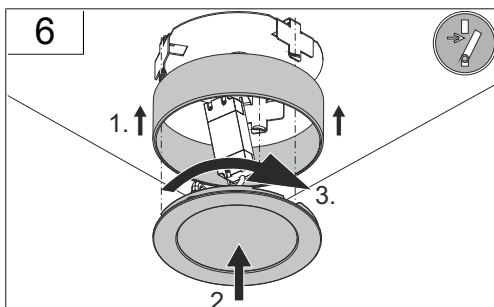

Instruction:

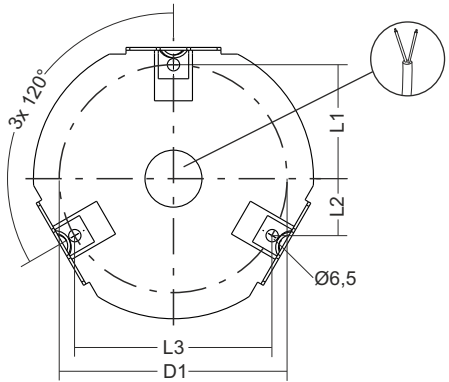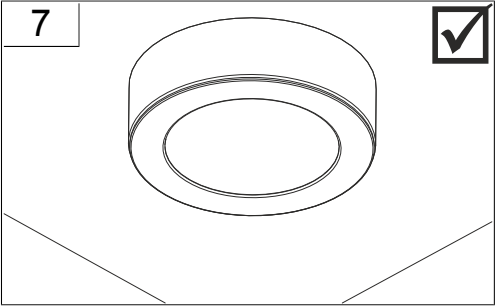

	L1	L2	L3	D1
901495.002.X	60	30	103,9	Ø120
901496.002.X.X	81	40,5	140,3	Ø162
901497.002.X.X	113,5	56,8	196,6	Ø227
901498.002.X.X	137,5	68,8	238,2	Ø275

