

INSTRUCTION

36-2016

RZB
LIGHTING

Toledo Flat

901587.002.1



IP 40 IK06




200 - 240 V / 50 - 60 Hz



2 x 1,5 mm²


1,50 mm²

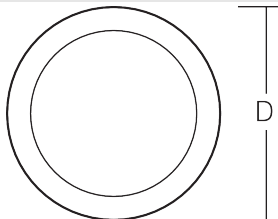

D



H

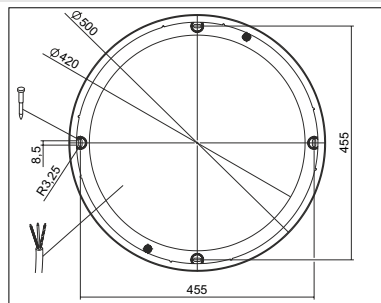

901587.002.1

D 500, H 63

LED

35,0 W

3,79 kg



EEK_{LED}

EEK

CRI

CCT

 
3600 lm

A+

A+

80

4000K



20

32

10,5 A



Die Leuchte darf nur mit ihren vollständigen Schutzabdeckungen betrieben werden.
The luminaire must be used with its complete protective covers only.

EN 12464



EN 12464










EN 12464

Wartungsplan/
Maintenance
schedule




RZB
Rudolf Zimmermann,
Bamberg GmbH
Rheinstraße 16
D-96052 Bamberg
Deutschland
Telefon +49 951/79 09-0
Telefax +49 951/79 09-198
www.rzb.de
info@rzb-leuchten.de

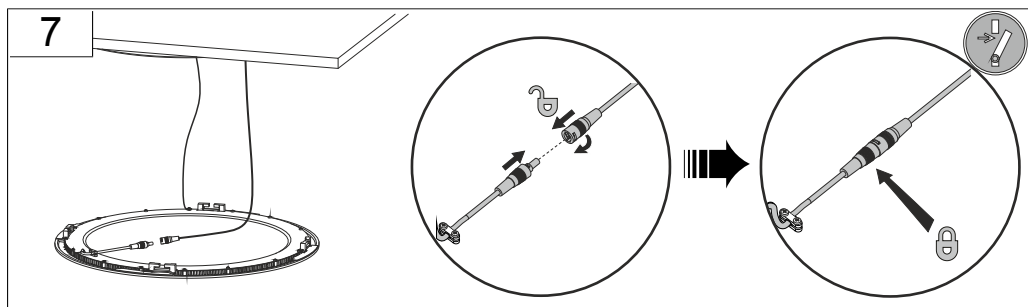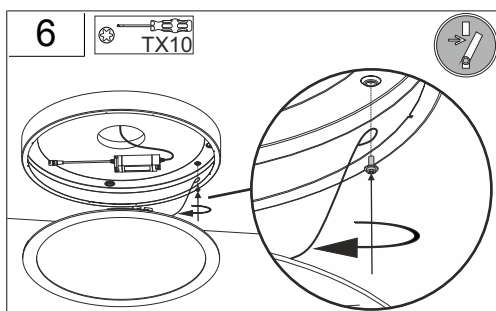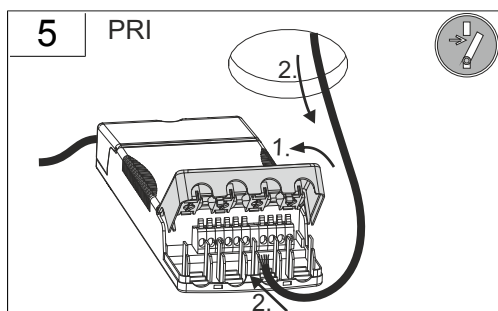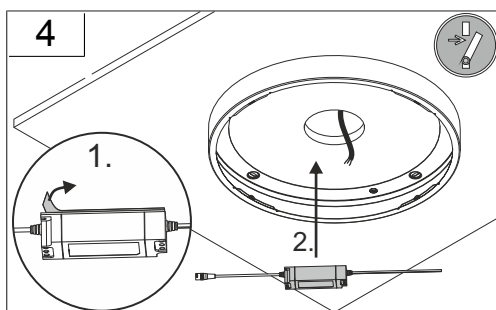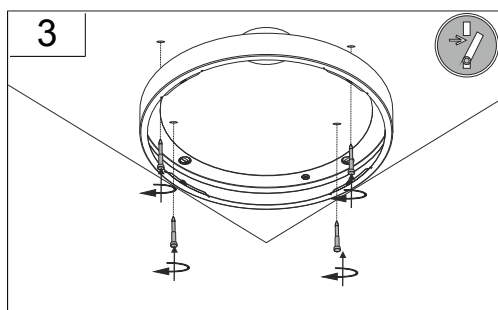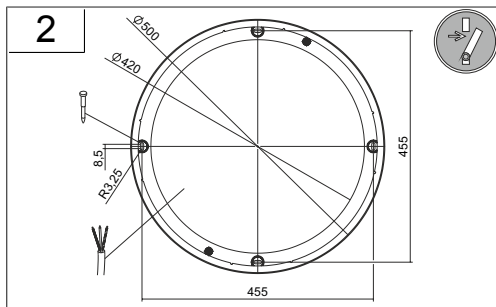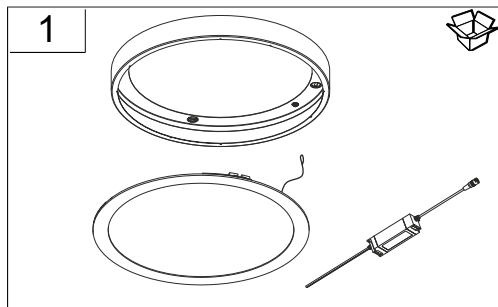





8

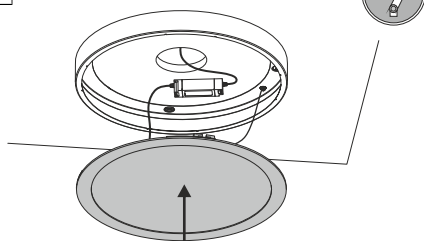

9

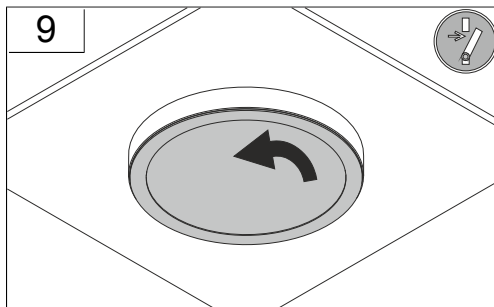

10

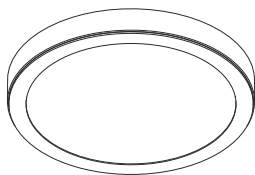



DIN 4844



Vor Wartung oder Reparatur freischalten/
power off before maintenance or repair