

INSTRUCTION

06-2019

RZB
LIGHTING

Less is more 50

312325.002



IP 20 IK02





 
~ 220 - 240 V 50/60 Hz



3 x 1,5 mm²



1,50 mm²

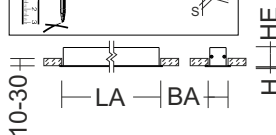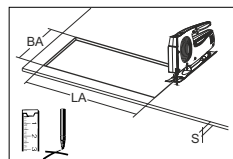

T_a min

312325.002

L 1420, B 71, H 2

3,2 kg

-20 °C



CCT

CRI

T_a max

LED

5 x 5,8 W

34 W

3850 lm

3000 K

80

30 °C



A++

A++

 
20 A / 30 µs

15

25




instruction
Wartungsplan/
maintenance
schedule



Die Leuchte darf nur mit ihren vollständigen Schutzabdeckungen betrieben werden.
The luminaire must be used with its complete protective covers only.

 EN 12464



EN 12464



EN 12464 / EN 13201

Wartungsplan/
Maintenance
schedule




RZB
Rudolf Zimmermann,
Bamberg GmbH
Rheinstraße 16
D-96052 Bamberg
Deutschland
Telefon +49 951/79 09-0
Telefax +49 951/79 09-198
www.rzb.de
info@rzb-leuchten.de

www.rzb.de


1 / 4




1

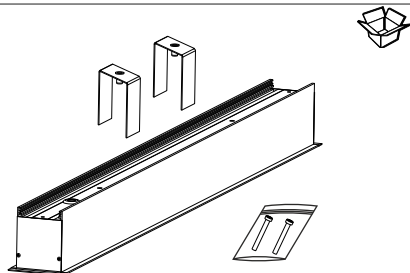


2

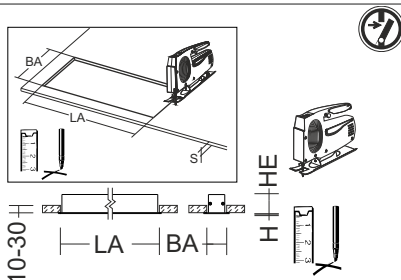


3

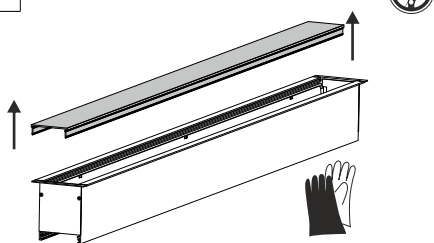


4

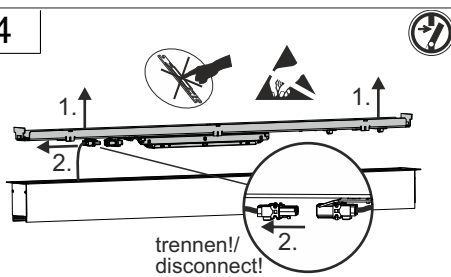


5





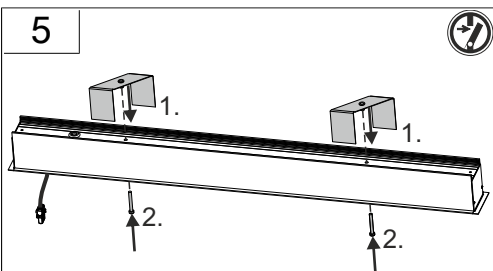




6a

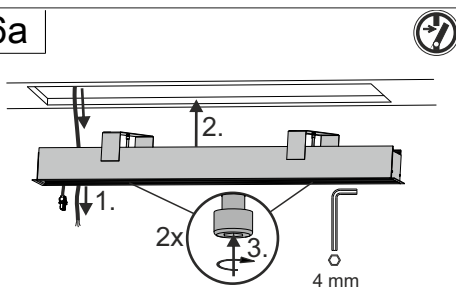

6b

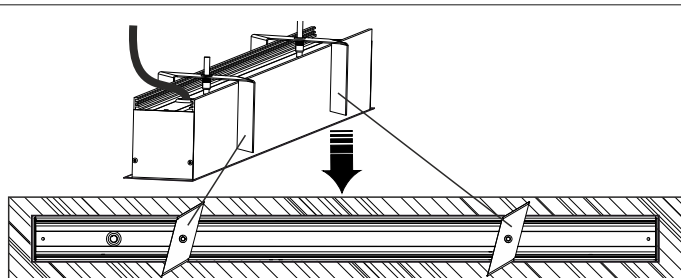

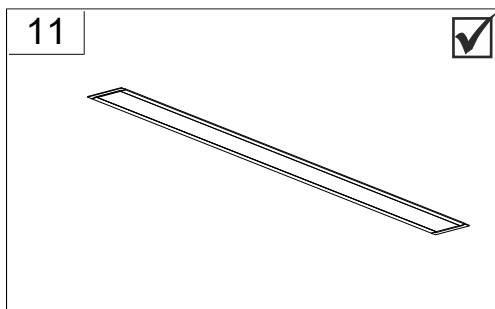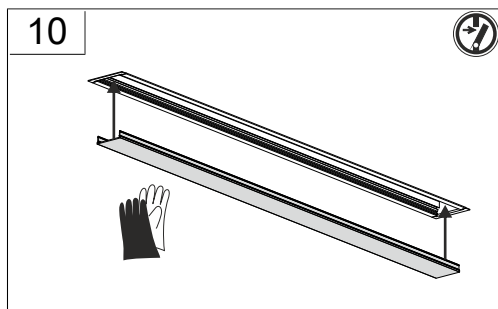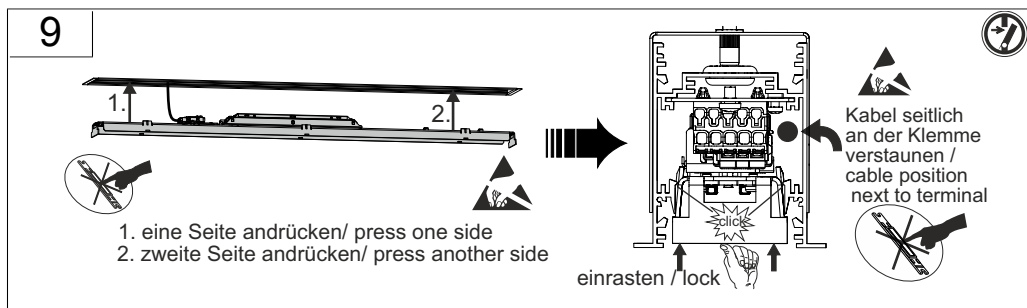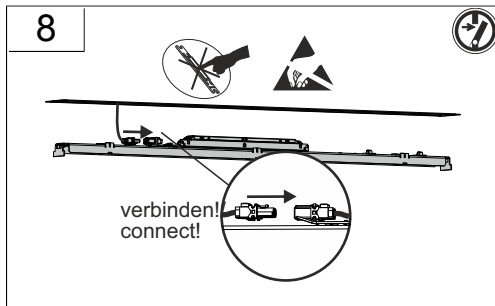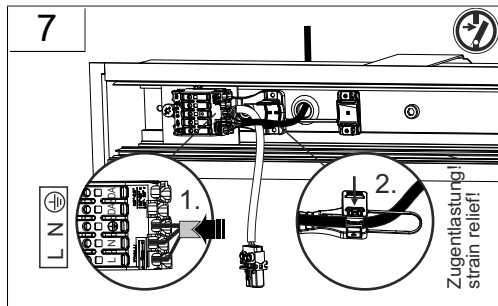

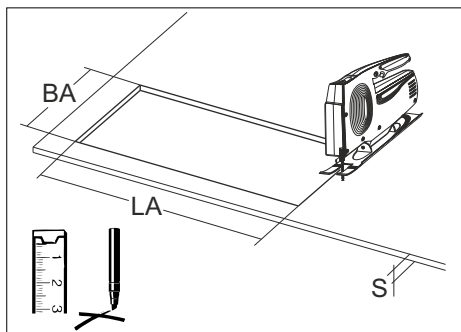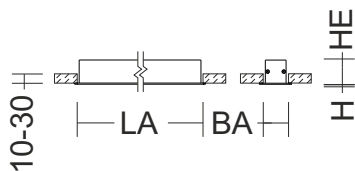

Less is more 50	L	B	H	LA	BA	S	HE
	862	71	1,5	848	60	10-30	100
	1142	71	1,5	1128	60	10-30	100
	1421	71	1,5	1408	60	10-30	100
	1703	71	1,5	1688	60	10-30	100
	1983	71	1,5	1968	60	10-30	100

DIN 4844


Vor Installation, Wartung oder Reparatur freischalten/
 power off before installation, maintenance or repair