


 
INSTRUCTION

06-2019

RZB
LIGHTING

Less is more 50

312320.003

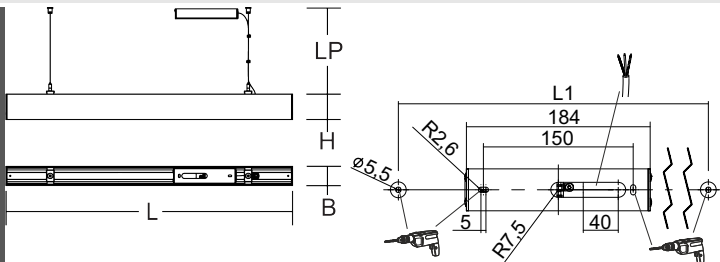


		 [mm]		 [mm]			T _a min
312320.003		L 1682, B 57, H 75		LP 2000		4,4 kg	-20 °C
	P 	P 	Φ 	CCT	CRI	T _a max	
LED	6 x 5,8 W	59 W	6900 lm	3000 K	80	30 °C	
EEK 	EEK 			 B10	 B16	 C10	 C16
A++	A++	21 A / 220 μs		15	24	24	40



Die Leuchte darf nur mit ihren vollständigen Schutzabdeckungen betrieben werden.
The luminaire must be used with its complete protective covers only.

 EN 12464



EN 12464
EN 13201



EN 12464 / EN 13201


Wartungsplan/
Maintenance
schedule




RZB
Rudolf Zimmermann,
Bamberg GmbH
Rheinstraße 16
D-96052 Bamberg
Deutschland
Telefon +49 951/79 09-0
Telefax +49 951/79 09-198
www.rzb.de
info@rzb-leuchten.de




1

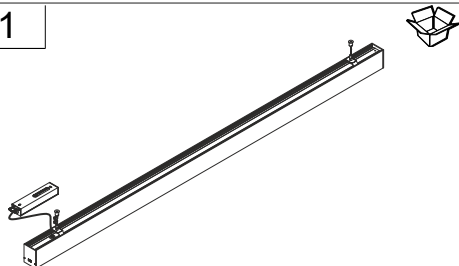


2

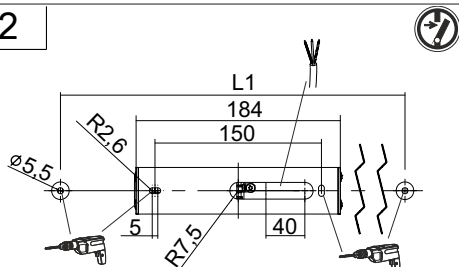


3

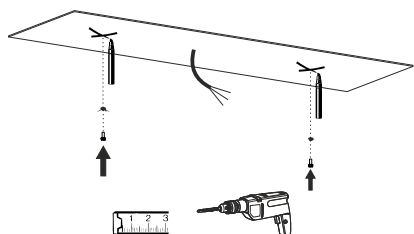


4

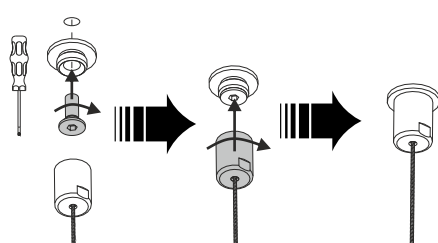


5

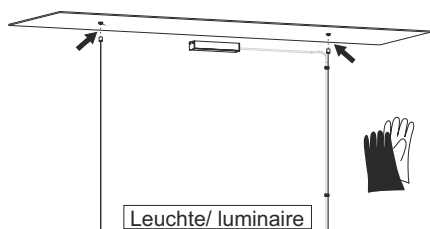


6

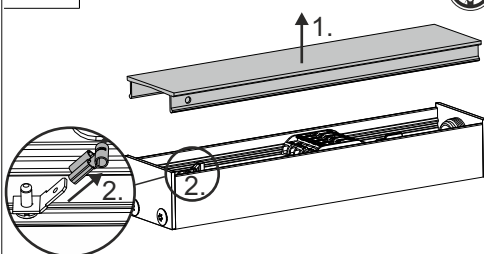

7

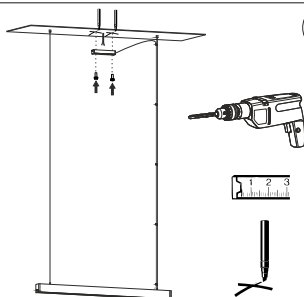

8

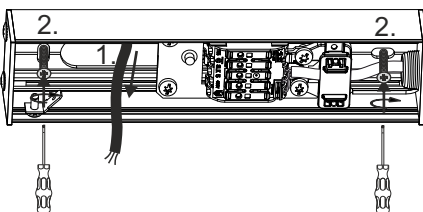





+




9

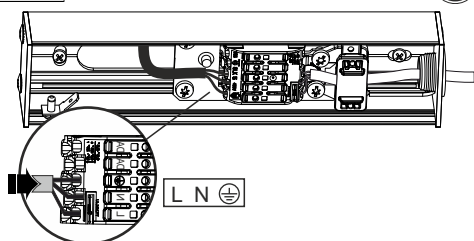


10

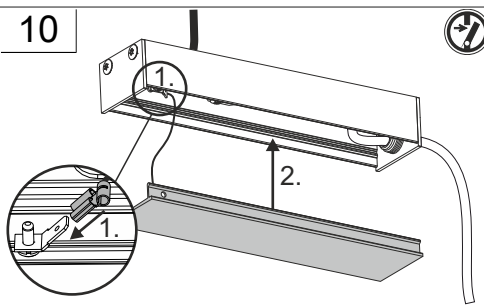


11

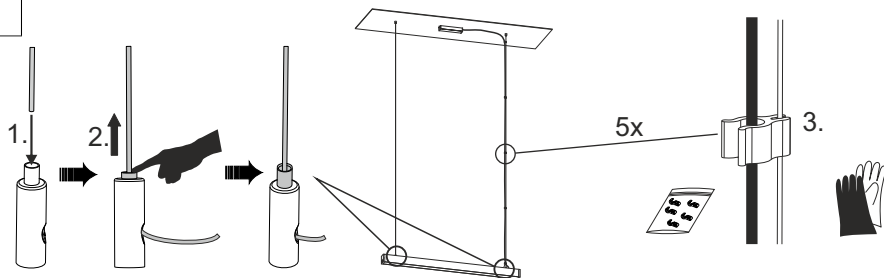

12

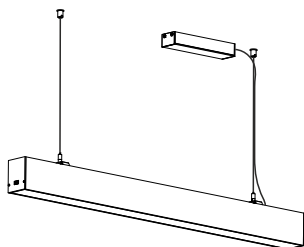

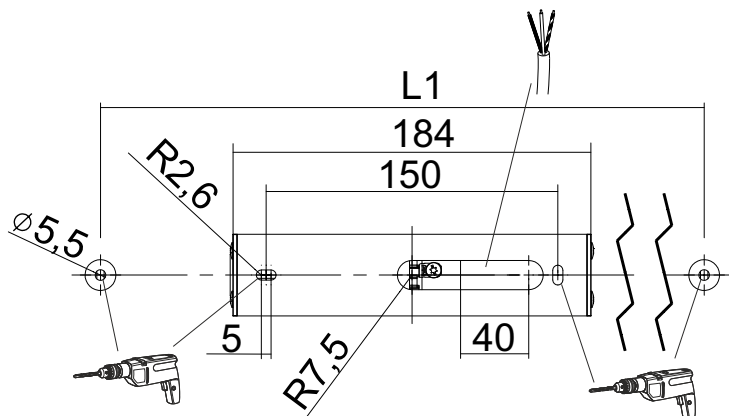

Less is more 50 Pendel

L	B	H	L1
848	57	75	580
1128	57	75	870
1408	57	75	1150
1689	57	75	1430
1969	57	75	1710

DIN 4844



Vor Installation, Wartung oder Reparatur freischalten/
power off before installation, maintenance or repair