

INSTRUCTION

06-2019

RZB
LIGHTING



Less is more 50

 
312343.003

IP 20 IK02

 ~ 220 - 240 V 50/60 Hz

 3 x 1,5 mm²
 1,50

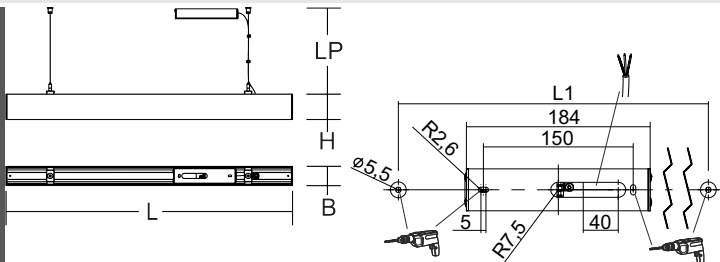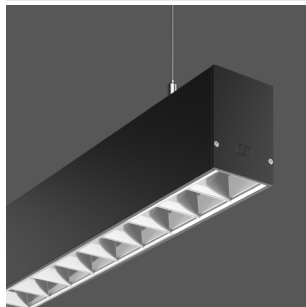

		 [mm]		 [mm]			T _a min
312343.003		L 1402, B 57, H 75		LP 2000		3,9 kg	-20 °C
	P 	P 	Φ 	CCT	CRI	T _a max	
LED	5 x 7,5 W	58 W	6400 lm	3000 K	80	30 °C	
EEK 	EEK 			 B10	 B16	 C10	 C16
A+, A++	A+	13 A / 270 μs		15	24	24	40



Die Leuchte darf nur mit ihren vollständigen Schutzabdeckungen betrieben werden.
The luminaire must be used with its complete protective covers only.

EN 12464




EN 12464
EN 13201



EN 12464 / EN 13201

 
Wartungsplan/
Maintenance
schedule




RZB
 Rudolf Zimmermann,
 Bamberg GmbH
 Rheinstraße 16
 D-96052 Bamberg
 Deutschland
 Telefon +49 951/79 09-0
 Telefax +49 951/79 09-198
 www.rzb.de
 info@rzb-leuchten.de




1

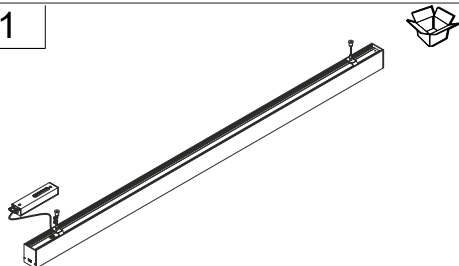


2

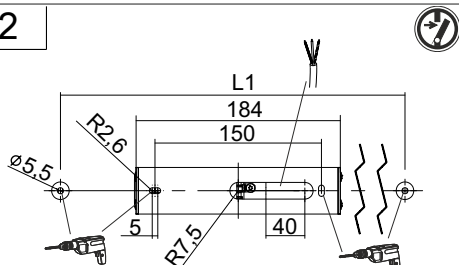


3

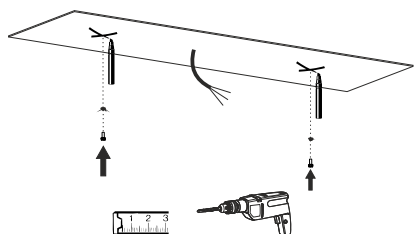


4

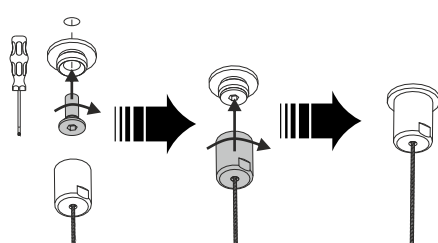


5

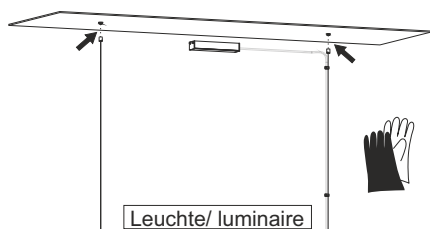


6

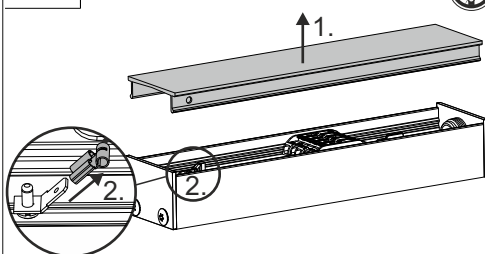

7

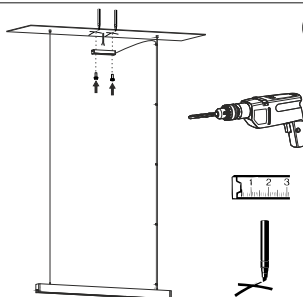

8

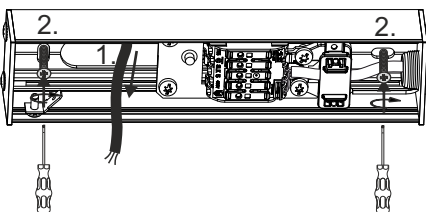





+




9

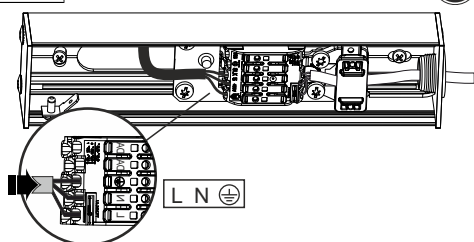


10

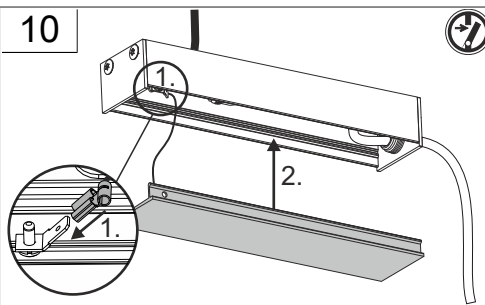


11

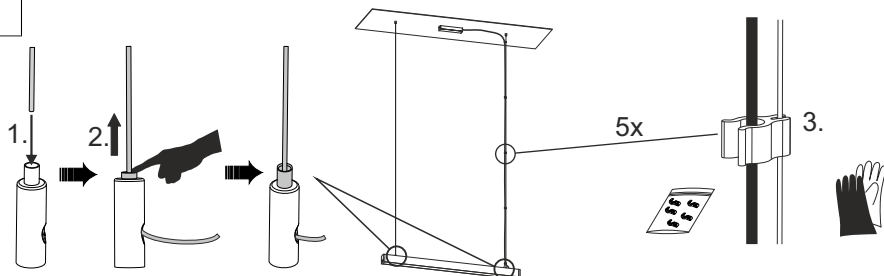

12

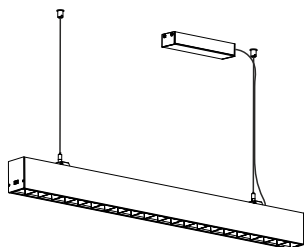

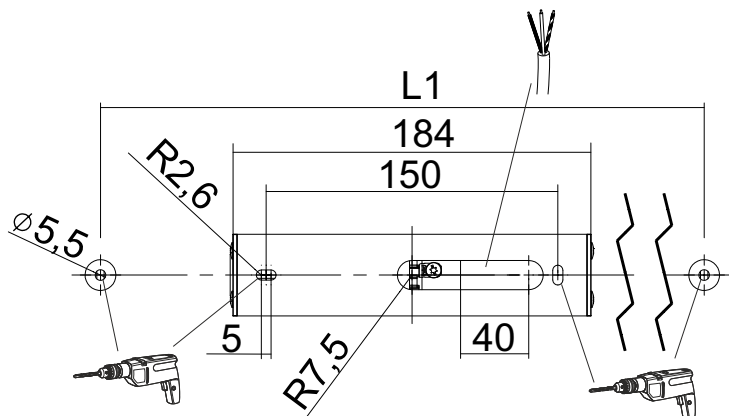

Less is more 50 Pendel

L	B	H	L1
848	57	75	580
1128	57	75	870
1408	57	75	1150
1689	57	75	1430
1969	57	75	1710

DIN 4844



Vor Installation, Wartung oder Reparatur freischalten/
power off before installation, maintenance or repair