


 

 
INSTRUCTION

06-2019

RZB
LIGHTING

Less is more 50

312307.002

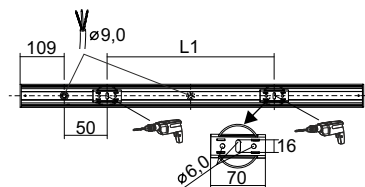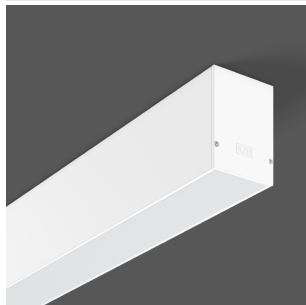

T_a min

312307.002

L 1402, B 57, H 75

3,12 kg

-20 °C



CCT

CRI

T_a max

LED

5 x 5,8 W

34 W

3850 lm

3000 K

80

30 °C



A++

A++

20 A / 30 µs

15

 
25



instruction
Wartungsplan/
maintenance
schedule




DIN EN 61340-5-1



Die Leuchte darf nur mit ihren vollständigen Schutzabdeckungen betrieben werden.
The luminaire must be used with its complete protective covers only.

 EN 12464



EN 12464
EN 13201



EN 12464 / EN 13201

Wartungsplan/
Maintenance
schedule




RZB
Rudolf Zimmermann,
Bamberg GmbH
Rheinstraße 16
D-96052 Bamberg
Deutschland
Telefon +49 951/79 09-0
Telefax +49 951/79 09-198
www.rzb.de
info@rzb-leuchten.de

www.rzb.de


1 / 4




1

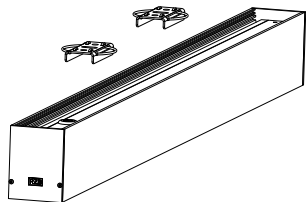


2

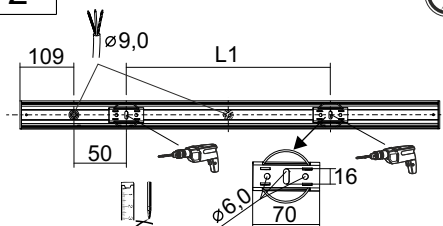

3

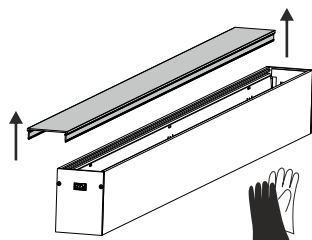


4

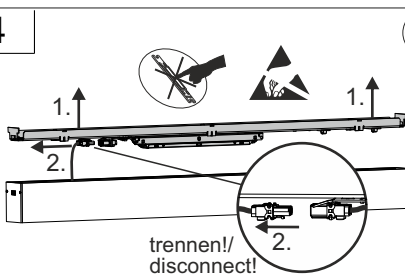


5









6a

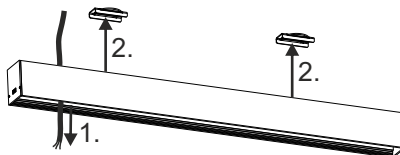

6b

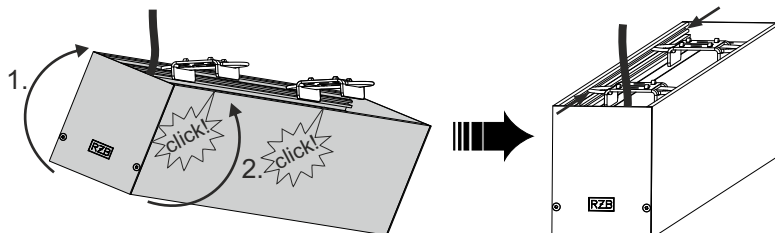

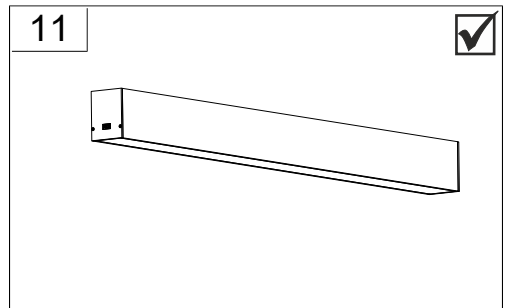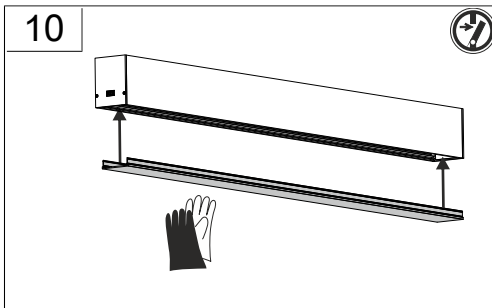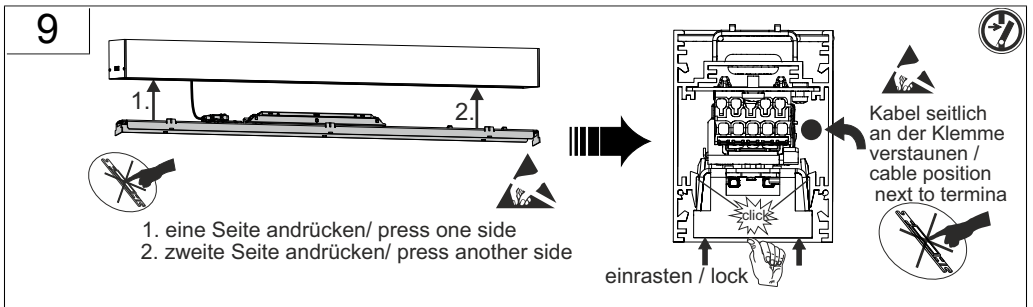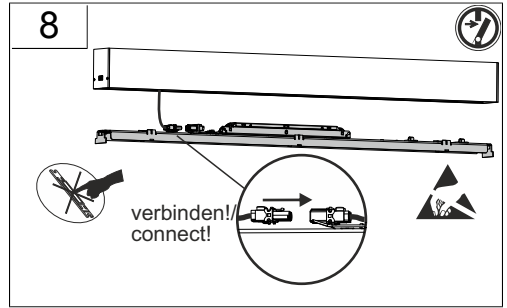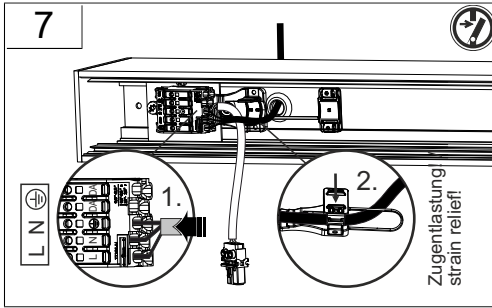

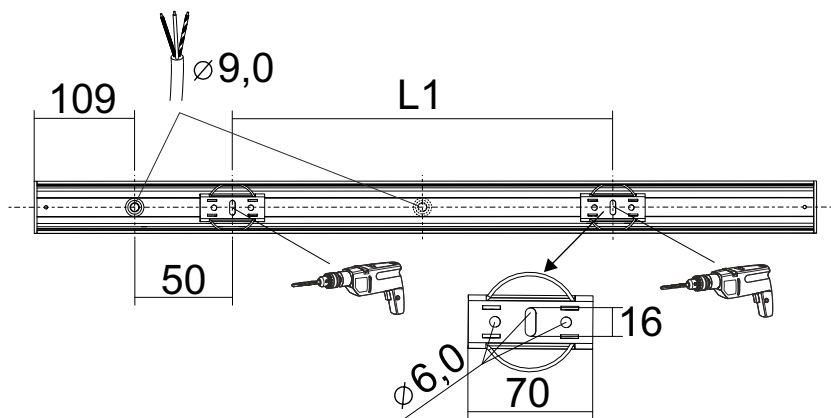

Less is more 50 Anbau

L	B	H	L1
848	57	75	580
1128	57	75	870
1408	57	75	1150
1689	57	75	1430
1969	57	75	1710

DIN 4844



Vor Installation, Wartung oder Reparatur freischalten/
power off before installation, maintenance or repair