

INSTRUCTION

26-2017

RZB
LIGHTING

Toledo Flat

901553.002.1.76



IP 40 IK06






220 - 240 V / 0/50/60 Hz



4 x 1,5 mm²



1,50 mm²

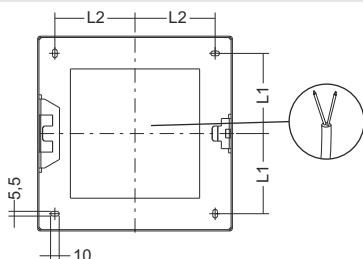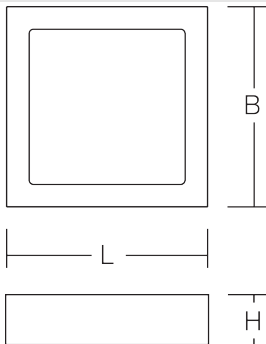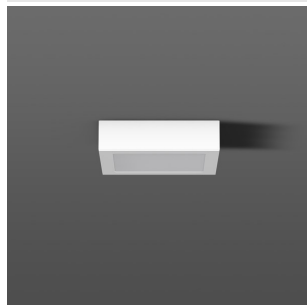

	L1	L2
901551.002.X	40	-
901552.002.X.X	70	-
901553.002.X.X	93	93
901554.002.X.X	120	120



901553.002.1.76 L 225, B 225, H 58

LED

17,8 W

1,6 kg

Φ

EEK_{LED}

EEK

CRI

CCT

 
1650 lm

A

A

80

4000K



45

80

 
0

0

17 A



instruction
Wartungsplan/
maintenance
schedule



Die Leuchte darf nur mit ihren vollständigen Schutzabdeckungen betrieben werden.
The luminaire must be used with its complete protective covers only.

EN 12464



EN 12464




EN 12464
Wartungsplan/
Maintenance
schedule




RZB
Rudolf Zimmermann,
Bamberg GmbH
Rheinstraße 16
D-96052 Bamberg
Deutschland
Telefon +49 951/79 09-0
Telefax +49 951/79 09-198
www.rzb.de
info@rzb-leuchten.de




1

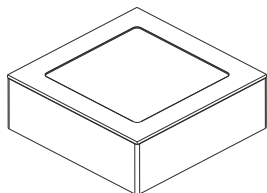

2

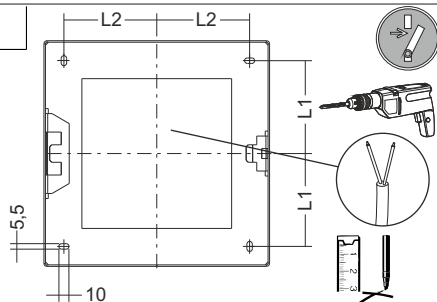

3


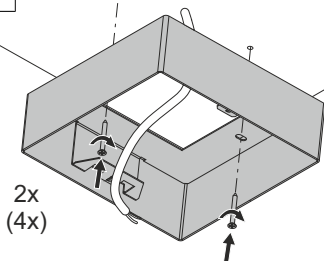


2x
(4x)




4



DALI

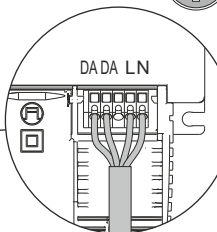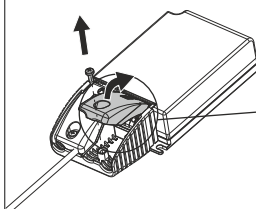

5



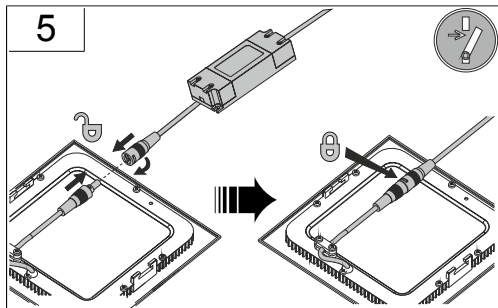


6

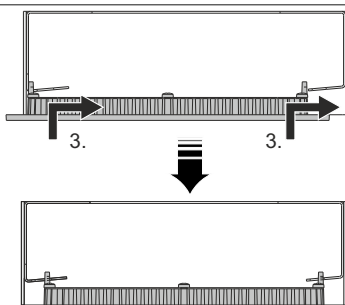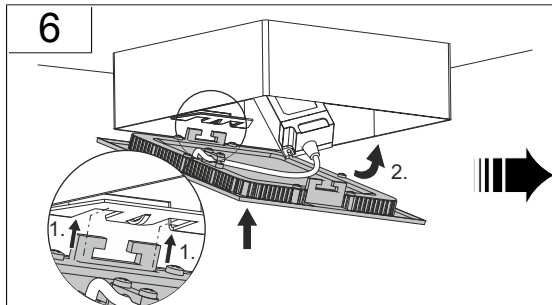



7

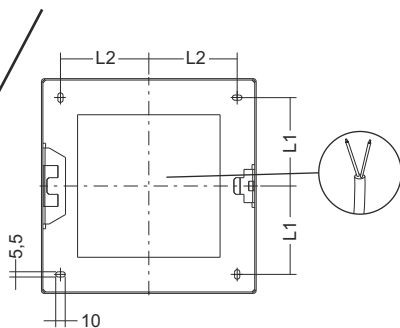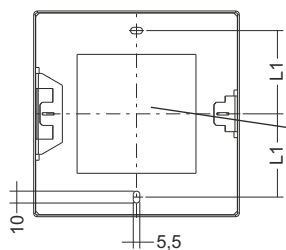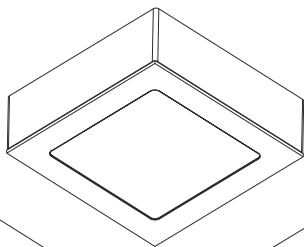

	L1	L2
901551.002.X	40	-
901552.002.X.X	70	-
901553.002.X.X	93	93
901554.002.X.X	120	120

