

INSTRUCTION

06-2019

RZB
LIGHTING

Less is more 50

312324.003



IP 20 IK02





~ 220 - 240 V 50/60 Hz



3 x 1,5 mm²



1,50 mm²

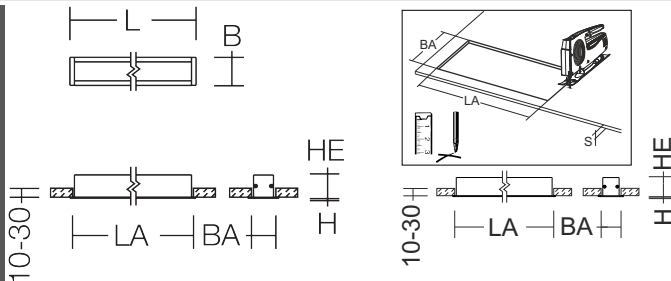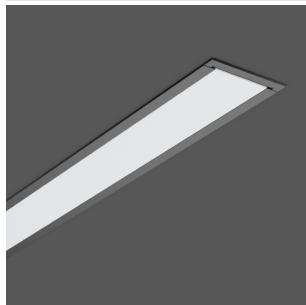

T_a min

312324.003

L 1140, B 71, H 2

2,65 kg

-20 °C



CCT

CRI

T_a max

LED

4 x 5,8 W

28 W

3100 lm

3000 K

80

30 °C



A++

A++

 
16 A / 100 µs

21

34




instruction
Wartungsplan/
maintenance
schedule



Die Leuchte darf nur mit ihren vollständigen Schutzabdeckungen betrieben werden.
The luminaire must be used with its complete protective covers only.

 EN 12464



EN 12464



EN 12464 / EN 13201

Wartungsplan/
Maintenance
schedule




RZB
Rudolf Zimmermann,
Bamberg GmbH
Rheinstraße 16
D-96052 Bamberg
Deutschland
Telefon +49 951/79 09-0
Telefax +49 951/79 09-198
www.rzb.de
info@rzb-leuchten.de


www.rzb.de

1 / 4


1

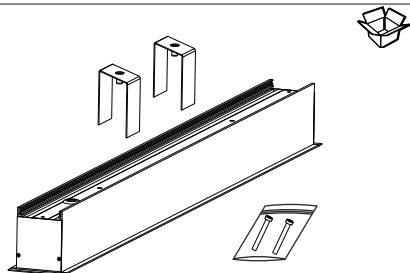


2

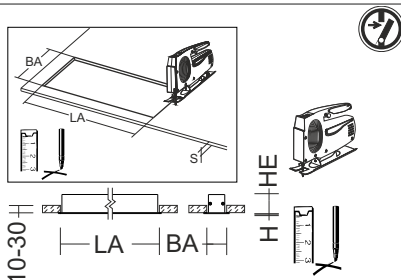


3

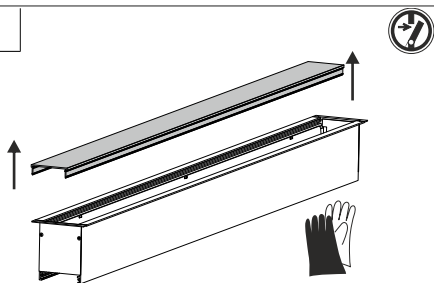


4

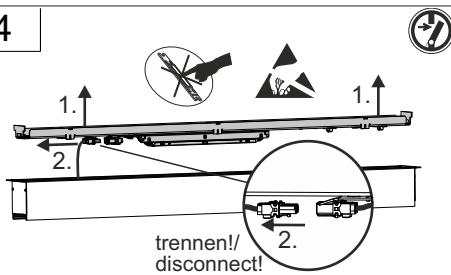


5





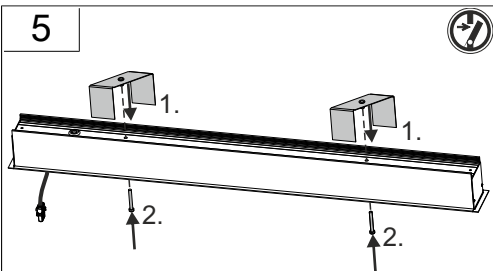




6a

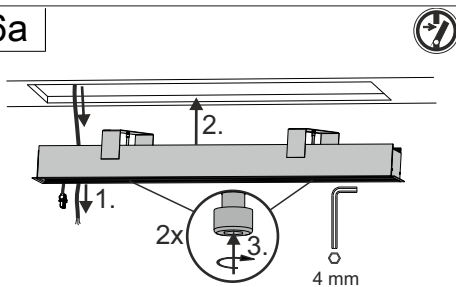

6b

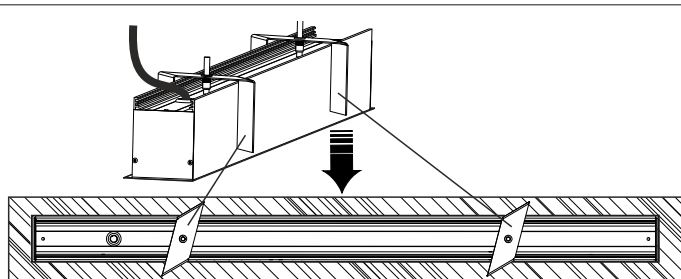

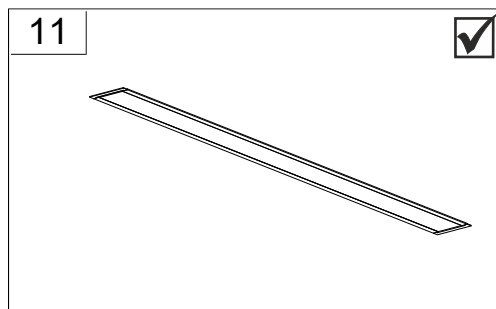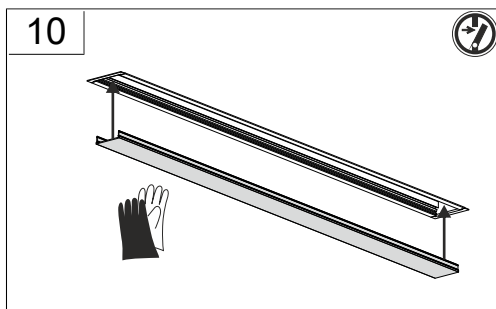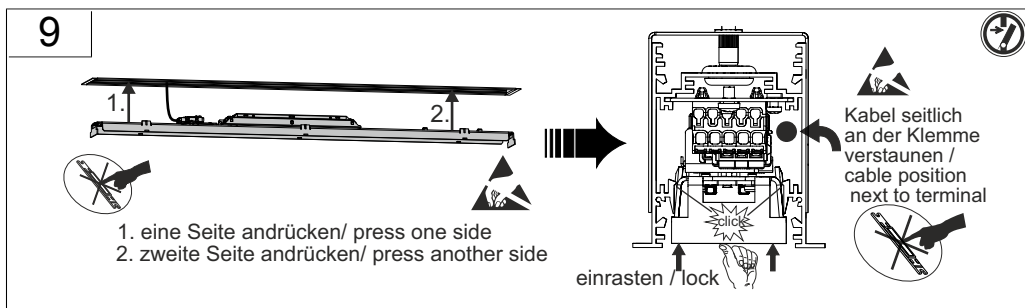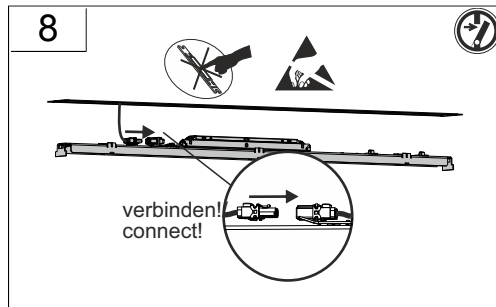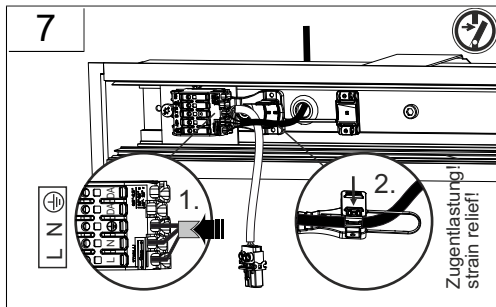

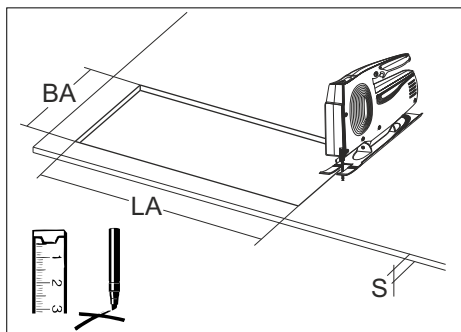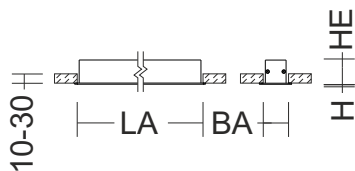

Less is more 50	L	B	H	LA	BA	S	HE
	862	71	1,5	848	60	10-30	100
	1142	71	1,5	1128	60	10-30	100
	1421	71	1,5	1408	60	10-30	100
	1703	71	1,5	1688	60	10-30	100
	1983	71	1,5	1968	60	10-30	100

DIN 4844



Vor Installation, Wartung oder Reparatur freischalten/
power off before installation, maintenance or repair