




EasyLan® Splice Box Mounting Instruction

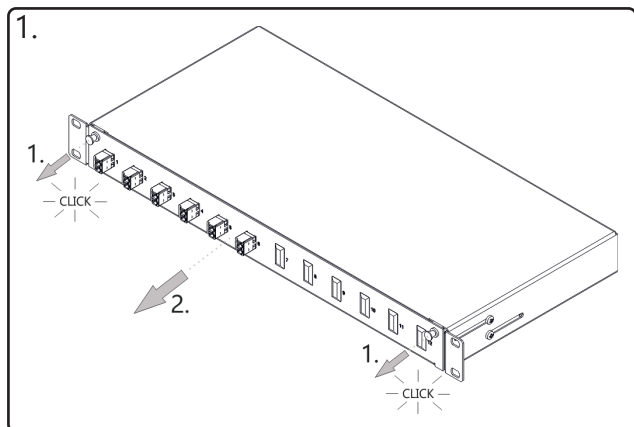


1. Pull grip forwards
2. Pull splice extraction forwards

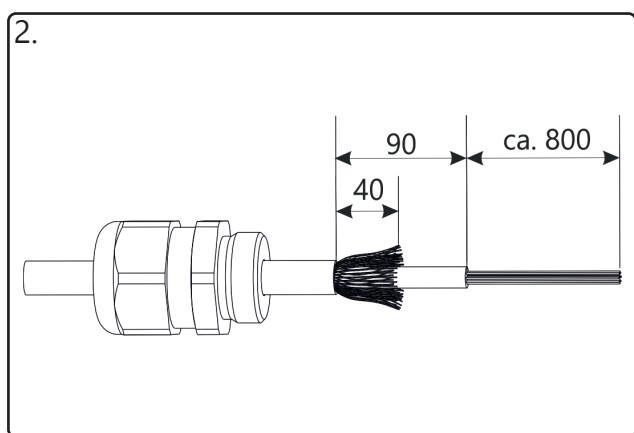

Prepare cable for splicing

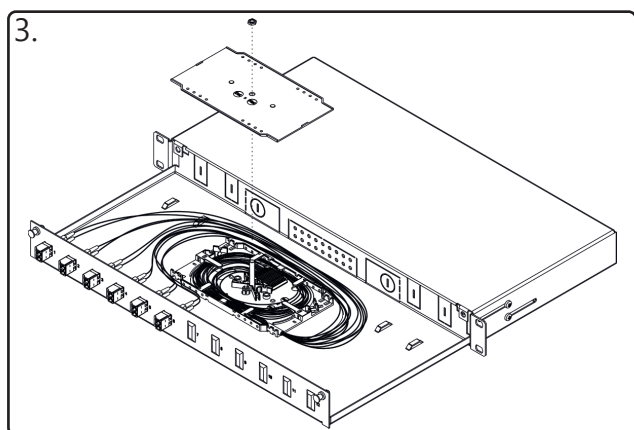


Open splice cassette

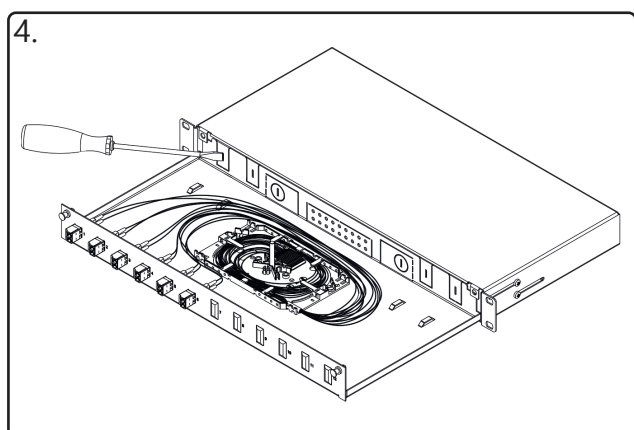


Breakout the insert whole
with a screwdriver


EasyLan® Splice Box Mounting Instruction

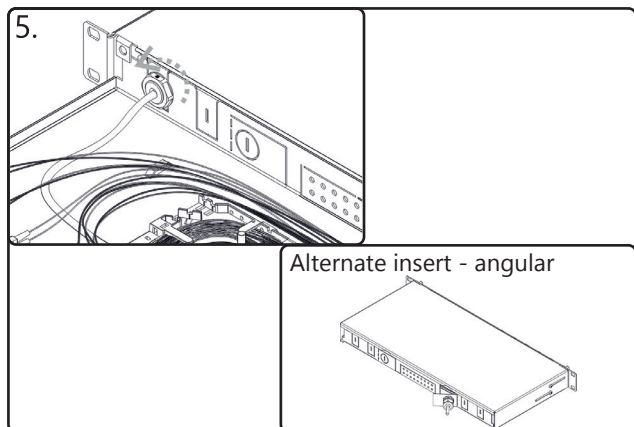


Set in cable clamp with cable and
fix cable clamp for strain relief

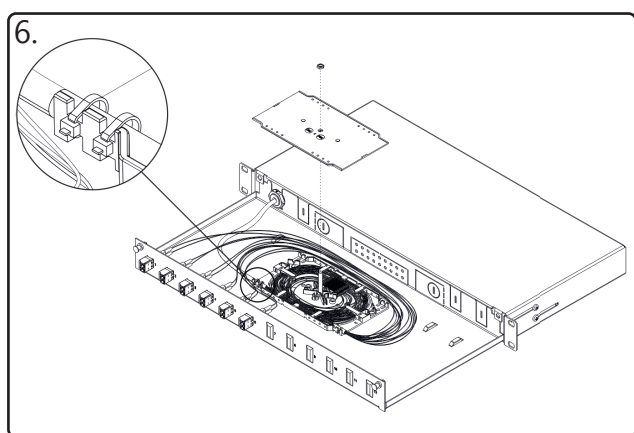

Fix fiber bundle in splice cassette
with cable tie

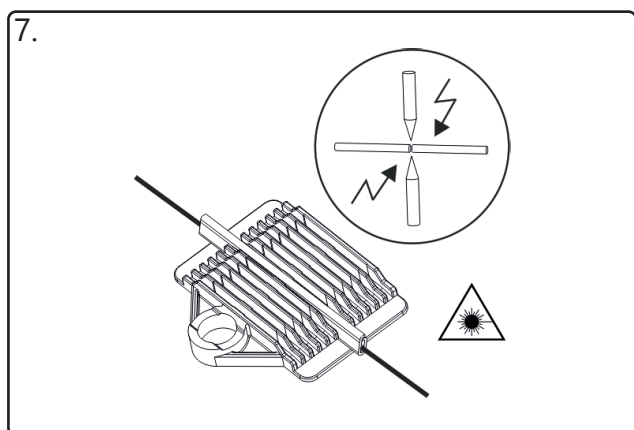

Splice fibers in splice holder

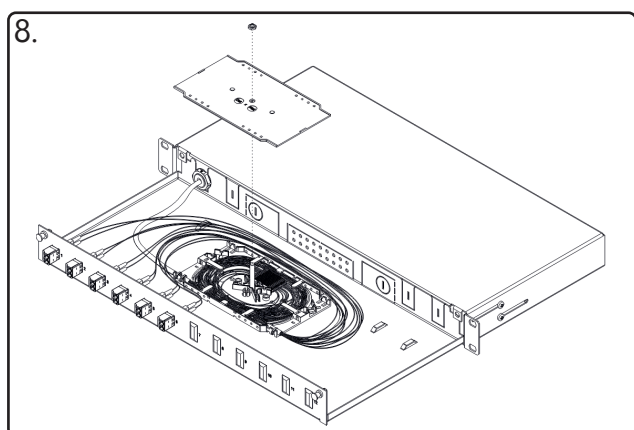

Put splice cassette cover back and
push extraction back to base situation